# **Mounting Plate Instructions**

**Model MPW200** 

#### INSTALLER

To assure you install this model easily and correctly, PLEASE READ THESE SIMPLE INSTRUCTIONS BEFORE STARTING THE INSTALLATION. CHECK YOUR INSTALLATION FOR COMPLIANCE WITH PLUMBING, ELECTRICAL AND OTHER APPLICABLE CODES. After installation, keep these instructions for future reference.


#### **IMPORTANT**

 
ALL SERVICE TO BE PERFORMED BY AN AUTHORIZED SERVICE PERSON

#### **Parts List**

Refer to the illustration to make sure you receive all mounting plate parts. If any parts are missing contact your local distributor or call 1.800.260.6640.

ITEM NO.	QTY.	PART NO.	DESCRIPTION
1	1		Mounting Plate
2	32		Hex Nut 5/16-18
3	32	75541C	Flat Washer .339/.359ID
4	8	75708C	Threaded Rod 5/16-18 x 6 ln.

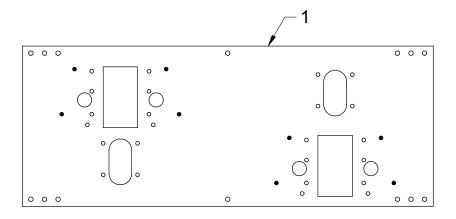



This Mounting Plate System is designed for use with the following models: HRF Series, Barrier Free SoftSides®, OVL II™, and SWIRLFLO® Series.

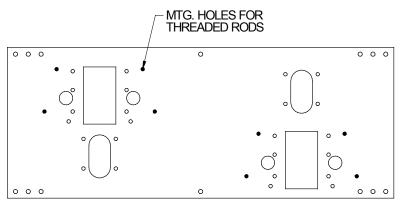



Fig. 1
Standard Configuration

# HRF Series, Barrier Free SoftSides®

Note: Standard configuration (High/Low) shown in (Fig. 1). For reverse configuration below, mounting plate can be flipped to mount units in the (Low/High) configuration.

 

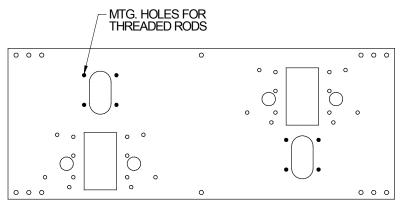



Fig. 2 Standard Configuration

#### OVL II™ Series

Note: Standard configuration (High/Low) shown in (Fig. 2). For reverse configuration below, mounting plate can be flipped to mount units in the (Low/High) configuration.

 


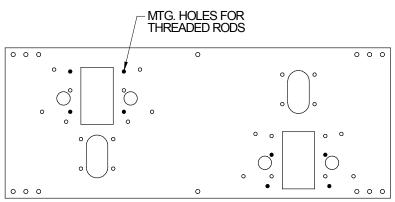


Fig. 3 Standard Configuration


#### SwirlFlo® Series

 Note: Standard configuration (High/Low) shown in (Fig 3). For reverse configuration below, mounting plate can be flipped to mount units in the (Low/High) configuration.




## HRF Series/Barrier Free SoftSides®

When mounting plate directly to wall studs please refer to the diagrams shown below. For electrical, waste, and water supply locations please refer to the Installation/Owners manual.

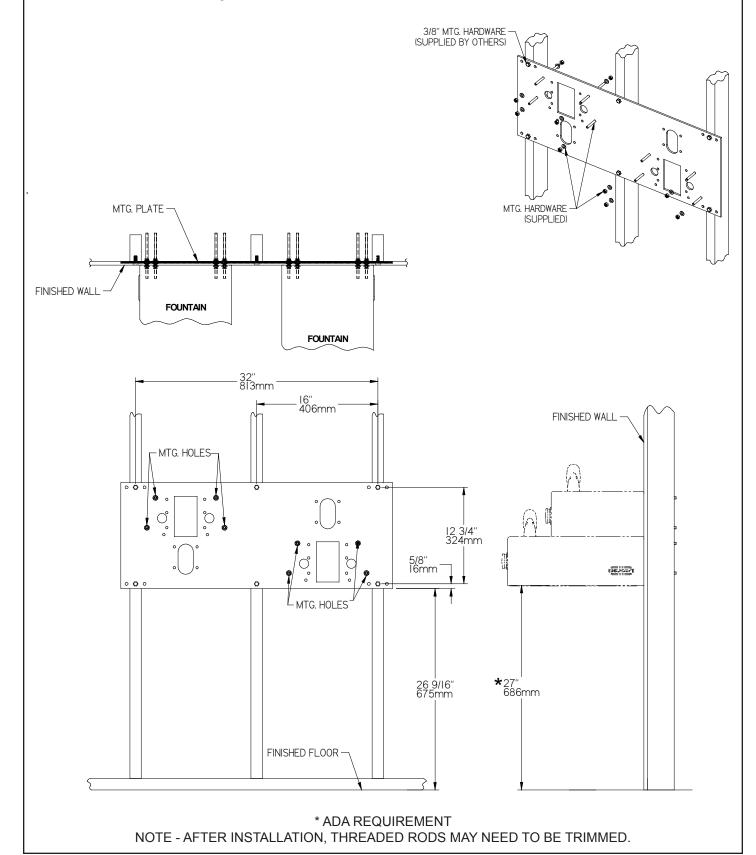

## HRF Series/Barrier Free SoftSides®


When using mounting plate with ML100 (Support Columns) please refer to the diagrams shown below. For electrical, waste, and water supply locations please refer to the Installation/Owners manual.

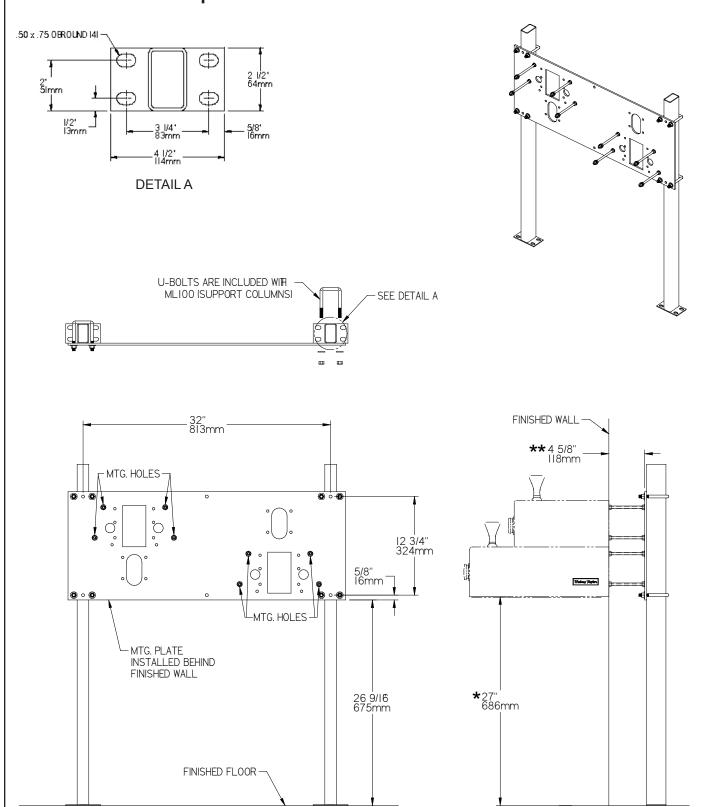

\* ADA REQUIREMENT \*\* WITH STANDARD STUD LENGTH OF 6 INCHES.

### **OVL II™ Series**

When mounting plate directly to wall studs please refer to the diagrams shown below. For electrical, waste, and water supply locations please refer to the Installation/Owners manual.

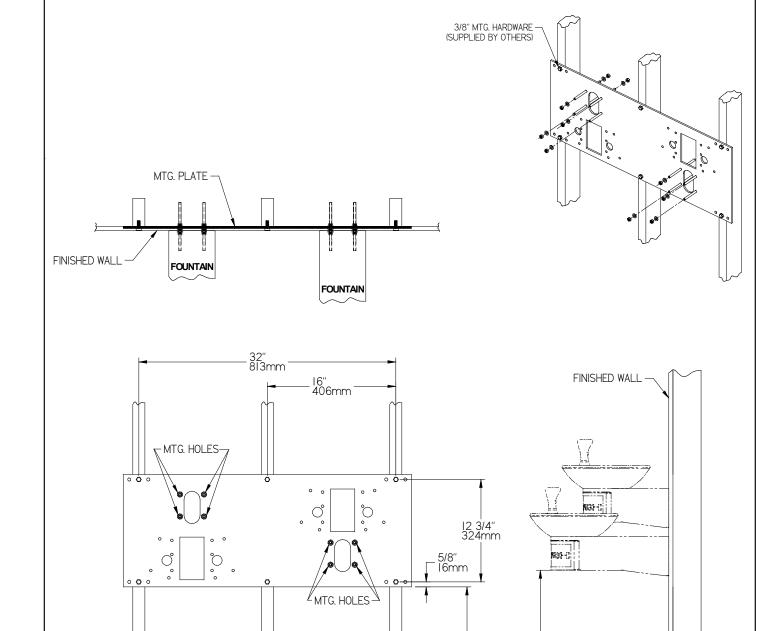


\* ADA REQUIREMENT NOTE - AFTER INSTALLATION, THREADED RODS MAY NEED TO BE TRIMMED.

FINISHED FLOOR

24 I5/I6" 634mm


### **OVL II™ Series**


When using mounting plate with ML100 (Support Columns) please refer to the diagrams shown below. For electrical, waste, and water supply locations please refer to the Installation/Owners manual.

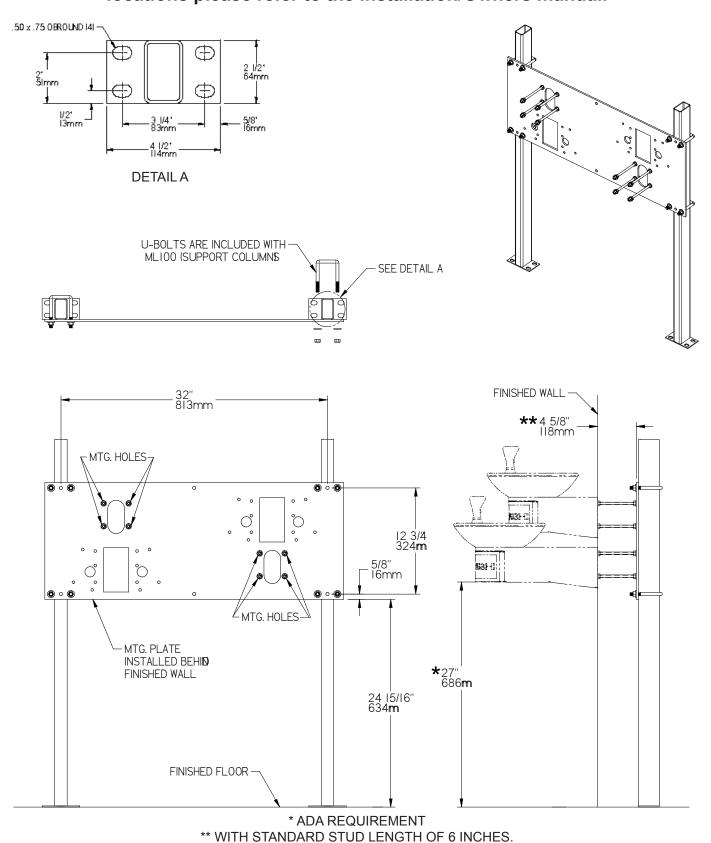

### Swirlflo® Series


When mounting plate directly to wall studs please refer to the diagrams shown below. For electrical, waste, and water supply locations, please refer to the Installation/Owners manual.

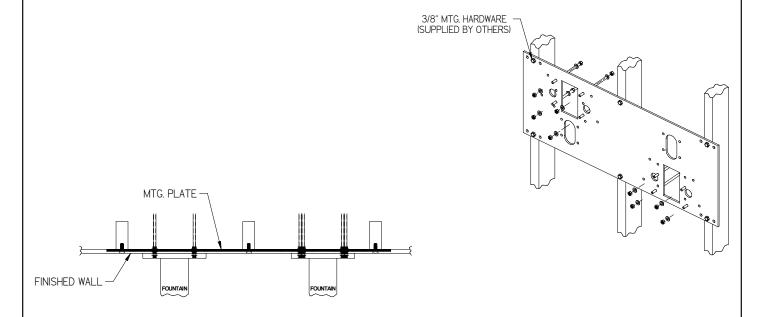

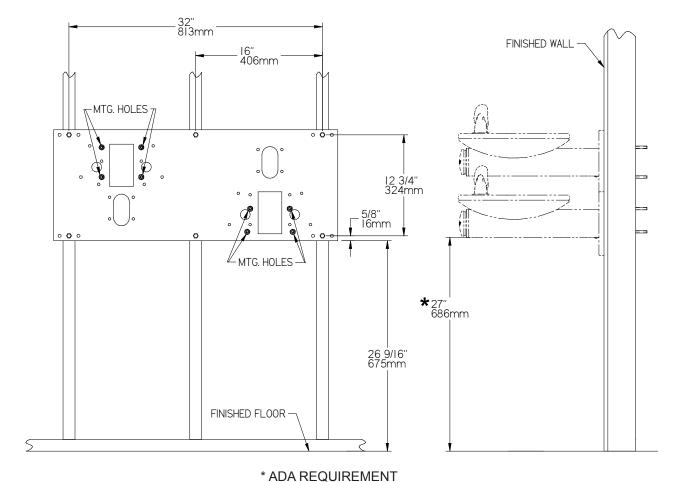

## SwirFlo® Series

When using mounting plate with ML100 (Support Columns) please refer to the diagrams shown below. For electrical, waste, and water supply locations please refer to the Installation/Owners manual.

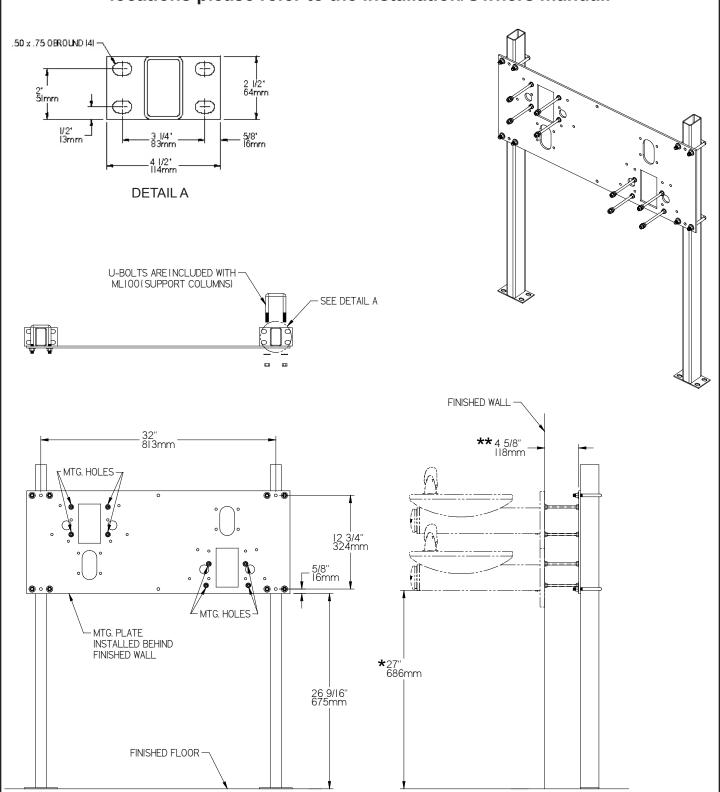

\* ADA REQUIREMENT \*\* WITH STANDARD STUD LENGTH OF 6 INCHES.

NOTE - AFTER INSTALLATION, U-BOLTS AND THREADED RODS MAY NEED TO BE TRIMMED. REPAIR SERVICE INFORMATION CALL TOLL FREE NUMBER 1.800.260.6640